

NRB160 Rotary Base

The rotary base is installed at the base of the traffic pole and permits the pole to be rotated so that the attached mast arm does not extend over the street. This allows the passing of oversized load trucks as well as the signal maintenance without road closure.

NRB 160 c/w 14"-16.5" BCD

